



Overfill & Therma Gauge Ordering Info

Therma Gauge Overfill Prevention Ordering Instructions.

Use these instructions when ordering the Therma Gauge as an overfill prevention device.


Extension Length - This will be the distance from the top of your gauge threads to the **full mark** in your tank. Your **full mark** should be no less than 90% capacity, and no more than 95% capacity.

Primary Tank Depth - This will be the distance from your full mark to your empty mark.

These measurements will vary depending upon each individual tank. It is the customers responsibility to insure that we receive the proper measurements for correct overfill warning.

Part Number:

H—Size Opening—Depth of Tank—Extension—Accessories

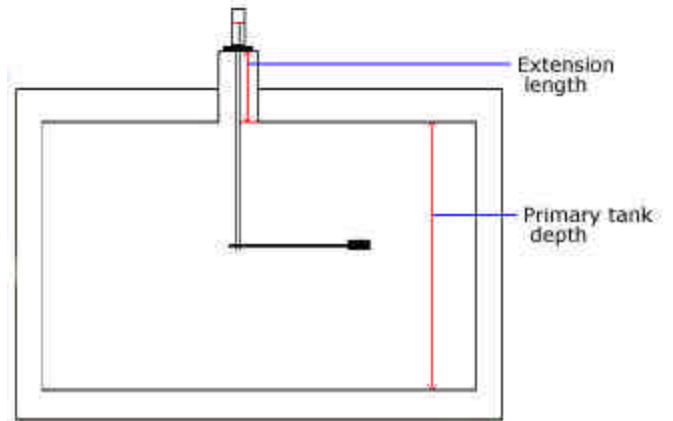

All Gauge measurements are in inches

Overfill Gauge Overfill Prevention Ordering Instructions.


Use these instructions when ordering the Overfill Gauge as an overfill prevention device.

The Length of the overfill gauge shall be the distance from the top of your gauge threads to the **full mark** in your tank. Your **full mark** should be no less than 90% capacity, and no more than 95% capacity.

These measurements will vary depending upon each individual tank. It is the customers responsibility to insure that we receive the proper measurements for correct overfill warning.

Part Number:

O—Size Opening—Gauge Length—Accessories

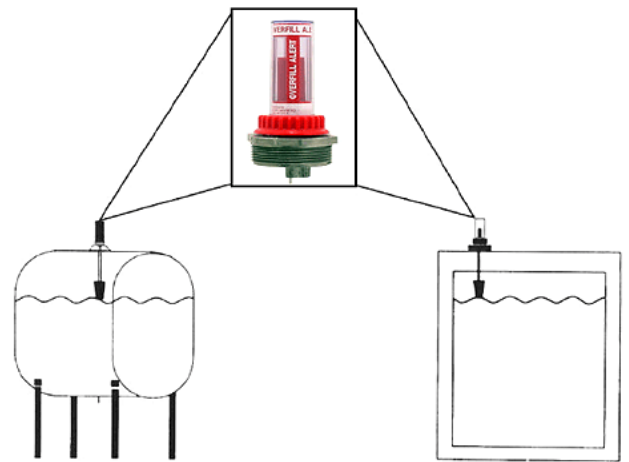

All Gauge measurements are in inches

Krueger Sentry Gauge
1873 Siesta Lane
Green Bay, WI 54313

www.ksentry.com



Contact us for help or a local distributor:

Ph: 920-434-8860

Fax: 920-434-8897

Email: info@ksentry.com